Instructions


How To SET UP

*Note: First Time Attachment Is Required.

Top and frame are shipped unattached to avoid damage. A first time set up requires that top bemounted on to the frame. This first time set up takes longer than future set ups. Once top is permanently attached to frame, set up and take down are easily accomplished within seconds.



1. Place your Promo-Tent frame in the center of area to be sheltered. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length - approximately 3/4 it's total size.

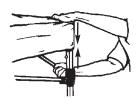

5. Engage the auto slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. The snap button will engage the hole. Then pull down the hem of the top. Repeat at all four corners.



2. Gently unfold the fabric top and place it over the open shelter. Align the four corners of the top over the four corners of the frame.



6. Lift two adjacent outer legs and slide out the inner legs until the snap button locks. Repeat on the opposite legs. **BE SURE TO ADJUST TWO LEGS AT ONE TIME TO AVOID FRAME DAMAGE.**



3. Attach the top to the frame by matching the Velcro® strips on the top with the Velcro® strips of the frame. Push the Velcro® firmly together at each corner.



7. To install side rails you must raise legs to highest position to expose holes in bottom leg for fitting of side rail hardware.



4. Grasp the bottom of the diamond shaped area of trusses, on opposite sides. Lift up and step backwards until shelter is fully opened. **BE CAREFUL NOT TO PINCH FINGERS.**



7. Side Rail hardware is 3 pieces that slide together. Insert this rail into slot in top of fabric side rail and insert each end of hardware into holes in bottom legs. Velcro®ends to legs.

How To Take Down



1. With partner, depress snap button on legs and telescope inner legs into outer legs. Repeat on the opposite legs making sure to do two legs at a time



2. Release the auto slider at each corner by first lifting hem of top. With one hand, push up on truss near slider, depress snap button. **Note:** It is easier to depress the snap button when the shelter weight has been removed from the button.



3. Grasp the top diamond on opposite sides of PormoTent. Lift the shelter up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it -Be careful not to pinch fingers. Store frame in cover bag.